

## **D. Limited Warranty**

The warranty is for the original purchaser. We will repair or replace, without charge, any part of a compressor we find to be defective in factory material or workmanship within 12 months of purchase. Proof of purchase is required (store receipt). Warranty services are provided at our service facility at the address shown below. You must pay all shipping and handling charges for your compressor.

This warranty does not cover if your compressor is (a) damaged in transport, by fire, corrosion, moisture or any occurrences beyond our control, (b) subjected to negligence or misuse, or ( c ) operated or maintained contrary to our instructions.

We will not be liable for damage to persons or property, commercial loss or incidental or consequential damage due to a defective compressor.

All implied warranties, including warranty of merchantability or fitness, are limited to the duration of this written warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore the above limitation may not apply to you.


Further information on service and warranty info contact:

Badger Air-Brush Co.  
9128 W. Belmont Ave  
Franklin Park IL 60131  
1800- AIR-BRUS(H)  
[www.badgerairbrush.com](http://www.badgerairbrush.com)  
[Info@badgerairbrush.com](mailto:Info@badgerairbrush.com)

## **X-Air Compressor Model 80- 7**



## **General User And Maintenance Instructions**

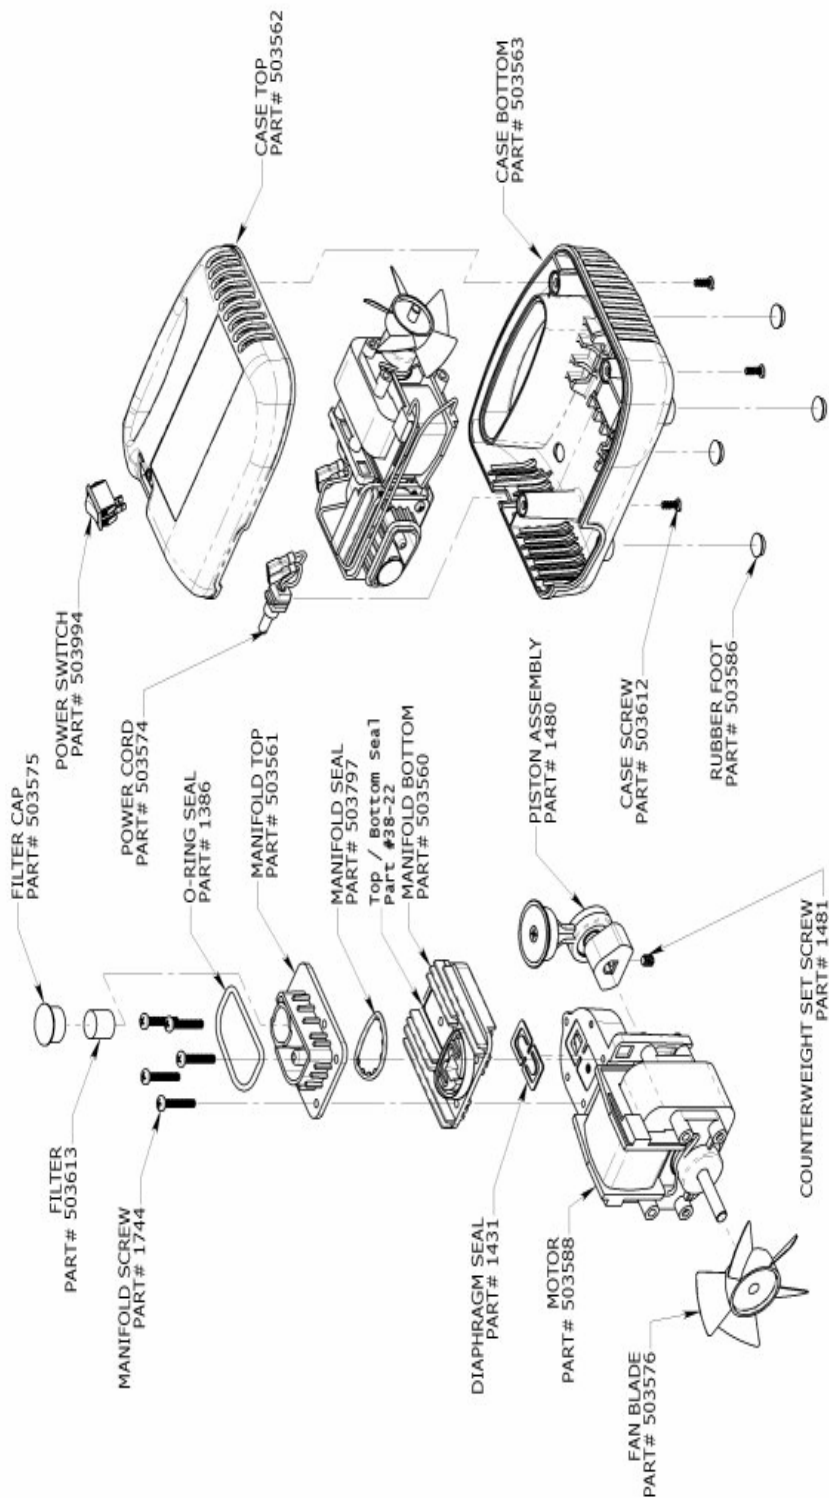

Thank you and congratulations on the purchase of your new compressor. This unit is built to the highest quality standards which produces excellent efficiency. If you use it properly and maintain it accordingly to this manual, it will perform to your fullest satisfaction for many years to come. Please read this manual carefully and follow the instructions, it will guarantee you trouble free operation.

## **A. Installation**

1. After taking your compressor out of its packaging, please check it carefully for any damages due to shipping.
2. Install the compressor on a flat surface in a suitably sized, dry room with good ventilation, where the temperature is not likely to rise above 94 degrees Fahrenheit (35 centigrade).

## **B. Safety**

1. Do not use the oil less compressor for purposes other than those for which it has been designed.
2. Do not modify or repair the compressor while it is connected to the electric current.
3. Note: the electric outlet has to be properly installed and grounded!



This bolt of lightning indicates un insulated material within your unit may cause an electrical shock. For the safety of everyone please do not remove product covering.



The exclamation point calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

Warning: to prevent fire or shock hazard, do not expose this equipment to rain or moisture.

## **C. Operating instructions**

1. Connect the equipment for your application to the outgoing fitting at the front of the compressor.
2. When the compressor gets hot from constantly running it automatically shuts off. After waiting about 20 minuets to cool down, it will start working again